


PARTS LIST

A-1 BENDER

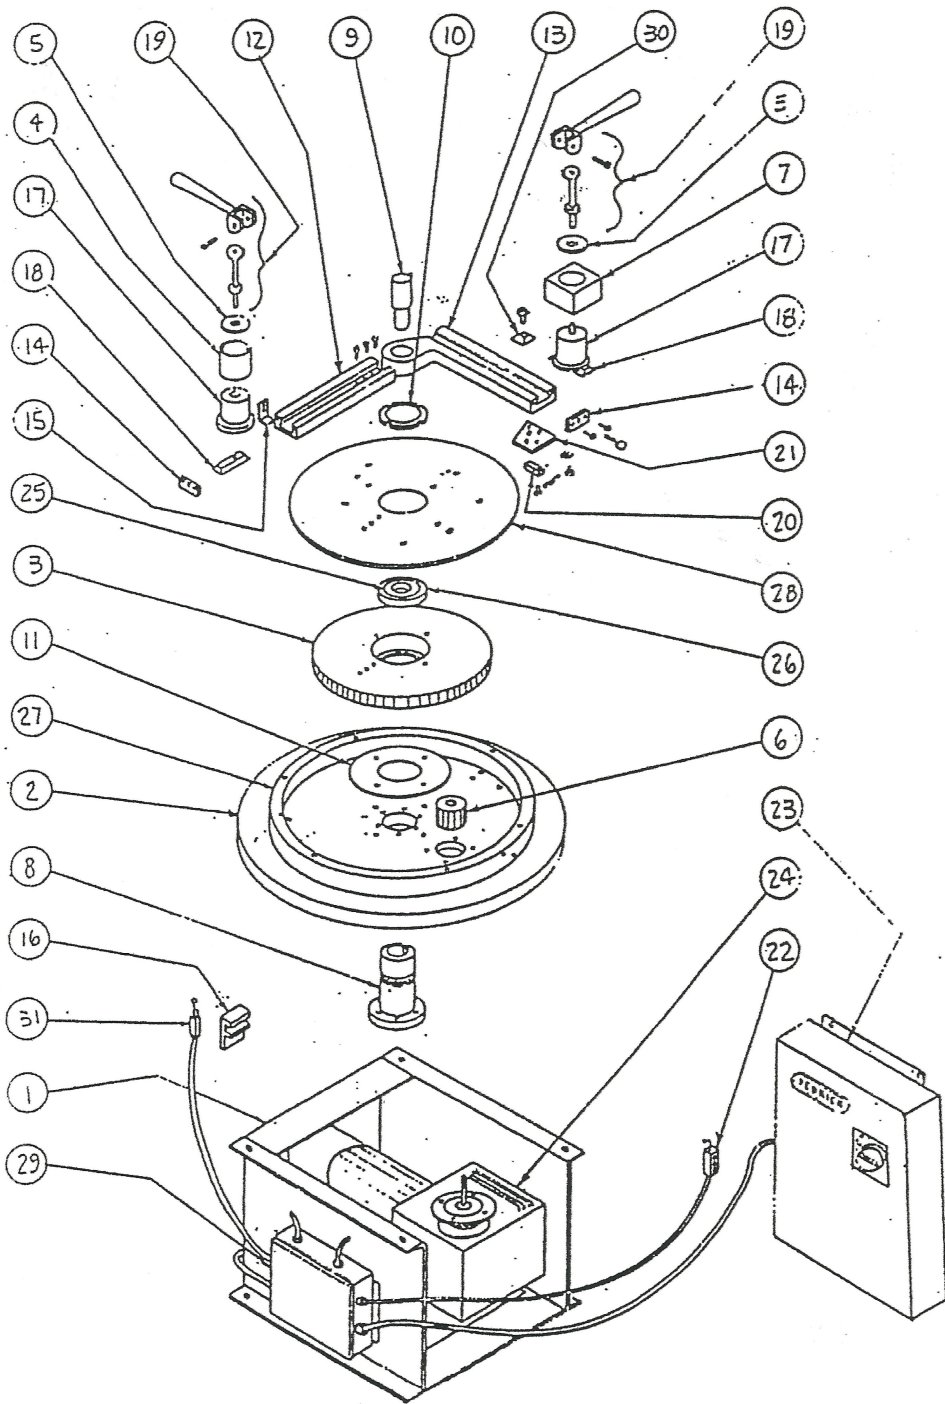

<u>PART NO</u>	<u>DESCRIPTION</u>	<u>DWG. NO.</u>
1	Stand	B-0244
2	Housing	C-0021
3	Bullgear	B-0245
4	Roller	A-1199
5	Cap	A-1200
6	Pinion	A-1201
7	Stop Block	A-1202
8	Spindle	B-0230
9	Spindle Extension	A-1203
10	Nut	A-1204
11	Bronze Plate	A-1205
12	Bending Arm	B-0241
13	Stop Arm	B-0242
14	End Plate	A-1206
15	Tripper	A-1207
16	Limit Switch Bracket	A-1208
17	Stud	A-1209
18	Slide	A-1210
19	Cam locking assembly	B-0248
20	Latch Pin	A-1211
21	Latch Plate	A-1212
22	Push Button Station	
23	Reversing Controller	
24	Gear Motor	COMM
25	Bear Cone	COMM
26	Bearing Cup	COMM
27	Housing Ring	B-0246
28	Cover Plate	B-0247
29	Junction Box	
30	Short Slide	A-1213
31	Limit Switch	E-50SA CH

PEDRICK

Established 1875

Phone: (856) 829-8900
Fax: (856) 829-8902

Tool & Machine Company, Incorporated

• P.O. Box 190 • Riverton, New Jersey 08077
Web: <http://www.pedrick.com> • E-Mail: info@pedrick.com