


A — SERIES PARTS LIST

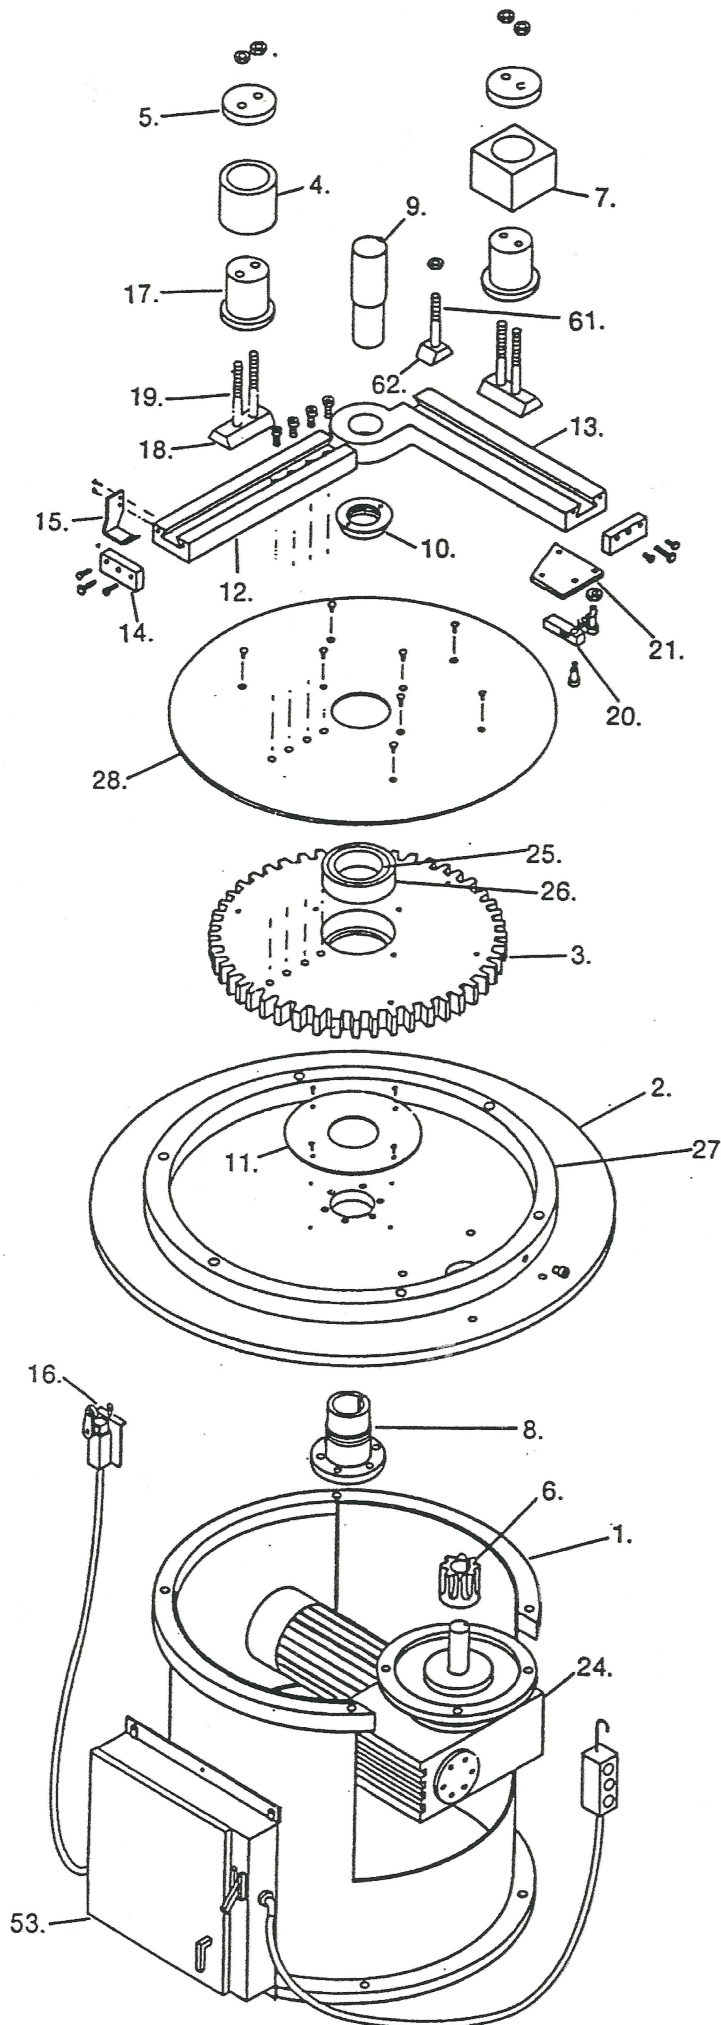

1. Stand
2. Housing
3. Bull Gear
4. Roller
5. Cap
6. Pinion
7. Stop Block
8. Spindle
9. Spindle Extension
10. Nut
11. Brass Plate
12. Bending Arm
13. Stop Arm
14. End Plates (2)
15. Tripper
16. Brackets (3)
17. Studs (2)
18. Slides (2)
19. Stud Bolts (4)
20. Latch Pin
21. Latch Plate
24. Gear Motor Drive
25. Roller Brg. Cone
26. Roller Brg. Cup
27. Housing Ring
28. Coverplate
53. Control Box
61. Short Slide Bolt
62. Short Slide

PEDRICK

Established 1875

Phone: (856) 829-8900
Fax: (856) 829-8902

Tool & Machine Company, Incorporated

• P.O. Box 190 • Riverton, New Jersey 08077
Web: <http://www.pedrick.com> • E-Mail: info@pedrick.com